 



# Changing Exchange Rates in Breakpoint

Mark Borle, July 7<sup>th</sup>, 2003


1. Log in the programmer code. This is done by entering **CLERK, 99, CLERK** or **CLERK, 9999, CLERK** depending on your store setup.
2. Press CONFIG MENU button, typically 3rd from the left on the top row.

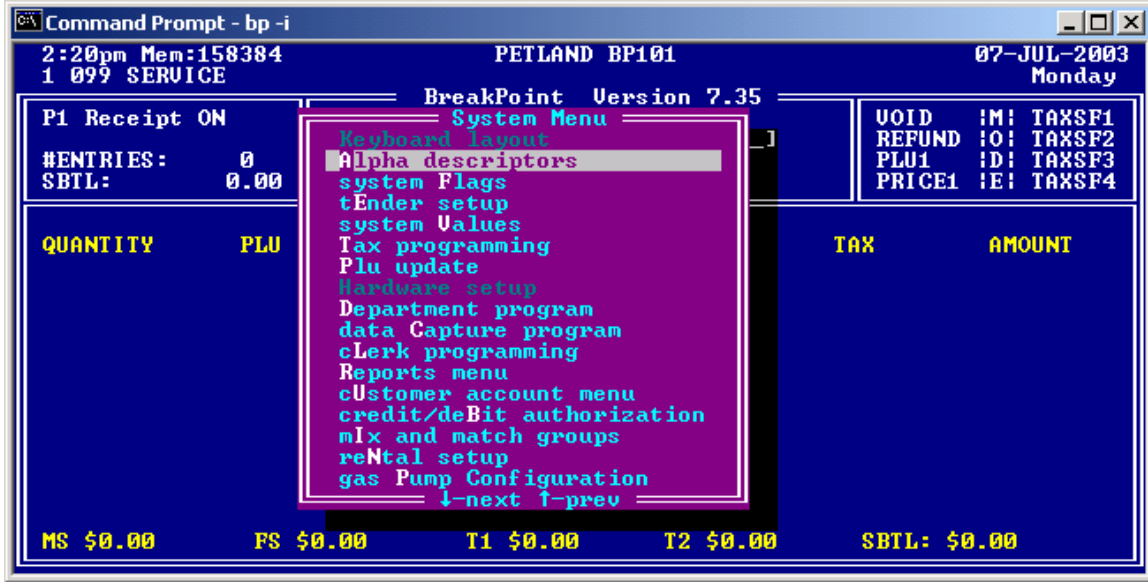

 3. Arrow down to *TENDER SETUP* and press **ENTER**.

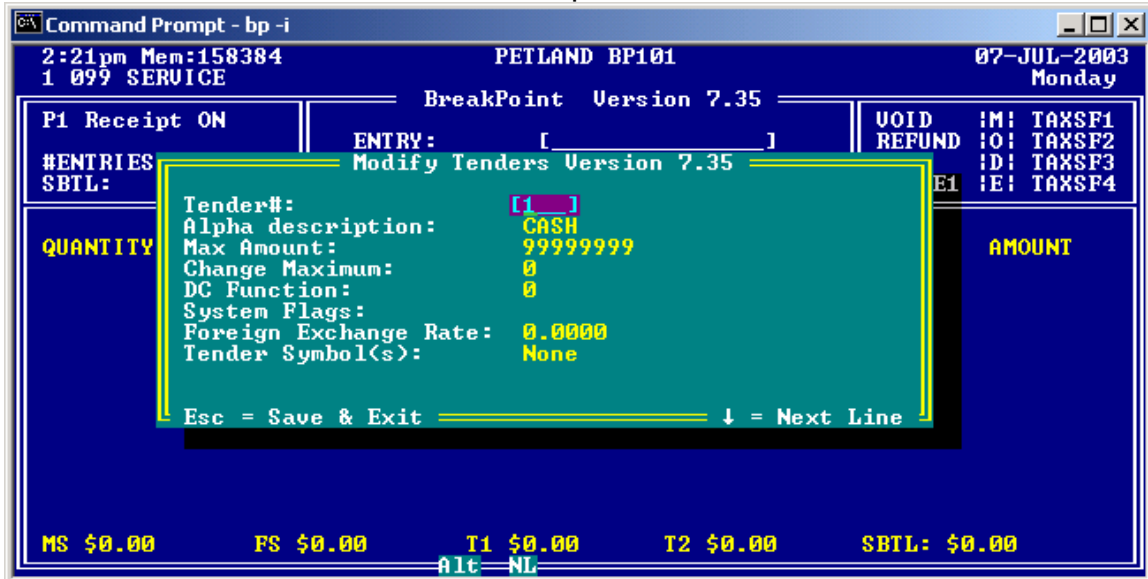

 4. Enter your **US Cash** number and hit enter. This may take some trial and error. Usually it's **6**. If the number you've chosen doesn't bring up US Cash, press the **UP ARROW** once and try another number. This number will be the same on all the tills, so once you've found it once, make a note of it.

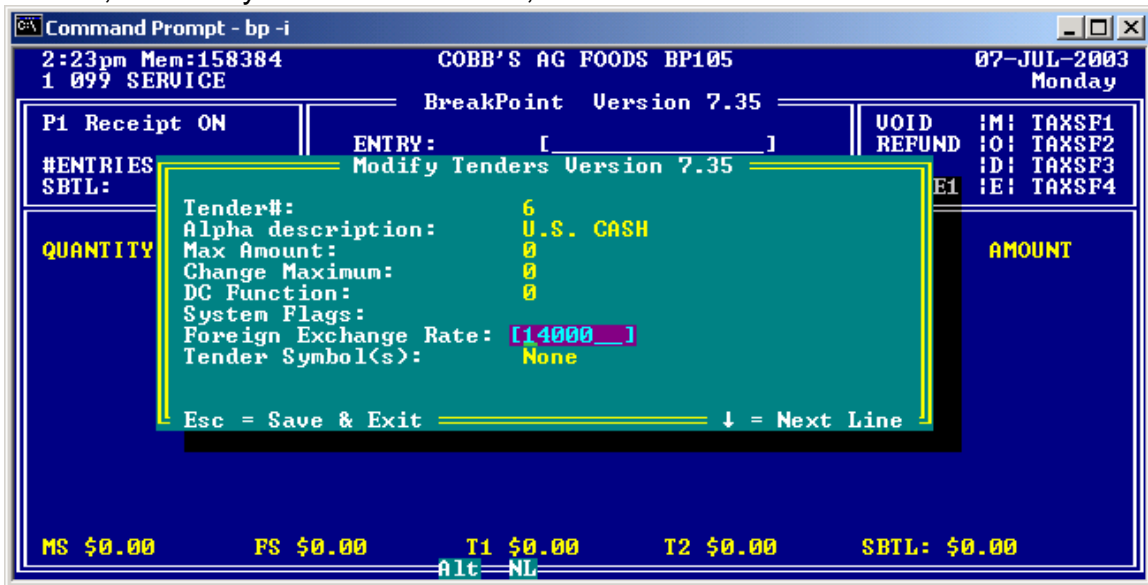

5. Modify the **Foreign Exchange Rate** value at the bottom to your liking. 13500 will come out as 1.35, thereby giving 65 cents on the dollar.

Give me a shout if you have problems.

Mark Borle  
Accurate Business Systems  
(403) 346-2277  
<http://www accuratepos.com/>